

WonderCooker™

USE AND CARE MANUAL

WonderCooker™

Congratulations on your purchase of the amazing WonderCooker™ unit. It's the ultimate kitchen helper with 6-products-in-one so you can grill, roast, flash fry, steam, slow cook and sauté. An entire universe of food is now at your fingertips with so many ways to create fabulous meals, breakfasts, lunch, dinner, appetizers and even soups and stews—the only limit is your imagination.

Modern European portable design makes it perfect for cooking on the counter top. You can serve right out of it and with its non-stick interior, cleanup is a cinch.

Please be sure to read all of the safety and usage instructions in this owner's manual prior to use and keep it handy for easy reference. Visit www.wondercooker.com today to order more exciting WonderCooker™ products.

Enjoy!



Table of Contents

Important Safety Warnings	2
Know Your WonderCooker™ Unit	4
Getting Started	6
Before Use	
Control Settings	
Cooking with Your WonderCooker™ Unit	7
Warm	
Slow Cook	
Steam	
Sauté/Grill	
Roast	
Flash Fry	
Cleaning and Maintenance	9
How to Order More WonderCooker™ Products	10
Trouble-Shooting	10
Warranty/Customer Service	11
Arbitration Agreement	12

IMPORTANT SAFETY WARNINGS

Read All Instructions Before Using

When using an electrical appliance, basic safety precautions should always be followed, including the following:

 
- **Read all instructions before using appliance.**
- Do not let the cord hang over the edge of the table, counter, or touch any hot surface.
- Place the appliance securely in the center of the counter or work space.
- Do not touch hot surfaces. Use handles to lift or move.
- Do not allow children to use this appliance.
- Close adult supervision must be provided when this appliance is used near children.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not operate on a non-heat resistant glass, wood cooking surface, or a tablecloth. It is imperative that a heat resistant cooking surface with heat finish be placed beneath this unit.
- Do not operate this or any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Always switch off appliance before removing the heating pan.
- Use extreme caution when moving WonderCooker™ unit containing hot oil or other hot liquids.
- Be sure the handle is correctly attached to the cooking basket and locked securely in place before using. See detailed instructions on the cooking basket.
- Do not use outdoors.
- Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn the control to “off,” then remove plug from wall outlet.
- Do not place near hot gas or electric burner, or in a heated oven.
- To reduce the hazards of potential shock, this appliance has a polarized plug (one blade is wider than the other), which will fit only one way in a polarized outlet. If the plug does not fit, contact a qualified electrician for assistance. Do not attempt to defeat or modify the plug in any way.
- Do not clean with metal scrubbing pads. Pieces can break off the pad and short-circuit electrical parts, creating a possibility of an electrical shock and damaging the unit.

- To protect against electrical shock, do not immerse plug, cord or WonderCooker™ unit base in water or any other liquid.
- **ATTENTION:** To protect against electric shock, cook only in included non-stick heating pan.
- The WonderCooker™ unit is for indoor, household use only.
- The WonderCooker™ unit is not intended for deep fat frying.
- Do not use appliance for other than its intended use.
- Save these instructions.
- Always turn your WonderCooker™ unit to "OFF" and unplug when no longer in use.
- Always allow your WonderCooker™ unit to cool before cleaning.
- Never pour cold water into warm non-stick heating pan.
- Never add water to hot oil.

SAVE THESE INSTRUCTIONS.

DO NOT IMMERSE WONDERCOOKER™ POWER BASE IN WATER OR PLACE IN A DISHWASHER. HANDLE CAREFULLY WHEN CLEANING.

WARNING: TO REDUCE THE RISK OF ELECTRICAL SHOCK OR FIRE, DO NOT ATTEMPT TO DISASSEMBLE APPLIANCE UNIT. NO USER SERVICEABLE PARTS ARE INSIDE. REPAIR SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL.

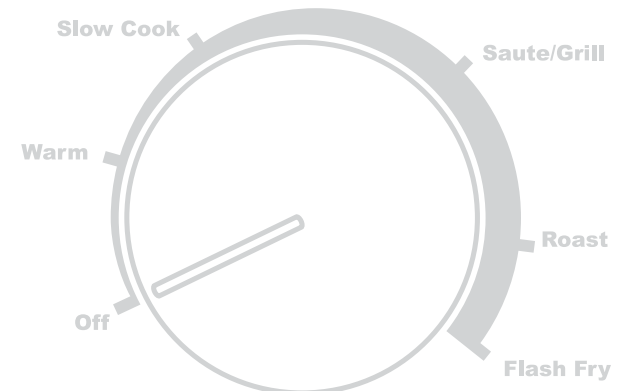

KNOW YOUR WONDERCOOKER™ UNIT

 
The WonderCooker™ unit is an 8-quart multi-functional cooker that gives you a Flash Fryer, Steamer, Roaster, Slow Cooker, Portable Grill top and Electric Sauté pan all in one portable, counter-space-saving appliance. The large range of temperatures, the lid and the rack will enable you to use the cooker for a multitude of functions such as slow cooking, steaming, grilling, frying and even candy-making. And that's not all—the WonderCooker™ unit boasts a 2.5" tall lid and a rack that attaches to the heating pan that will enable you to cook two different kinds of food at the same time in two layers.

Take a moment to get acquainted with your WonderCooker™ unit.

CONTENTS

8-quart multi-functional cooker includes:


- Lid
- Non-stick Heating Pan (Dishwasher-safe aluminum)
- Power Base
- AC Power Cord with Magnetic Plug
- Control Knob that cycles through Off, Warm, Slow Cook (Steam), Sauté/Grill, Roast and Flash Fry
- Power Indicator Light
- Stackable Steam Rack
- Onion-cutting Guide
- Fondue Forks (6)

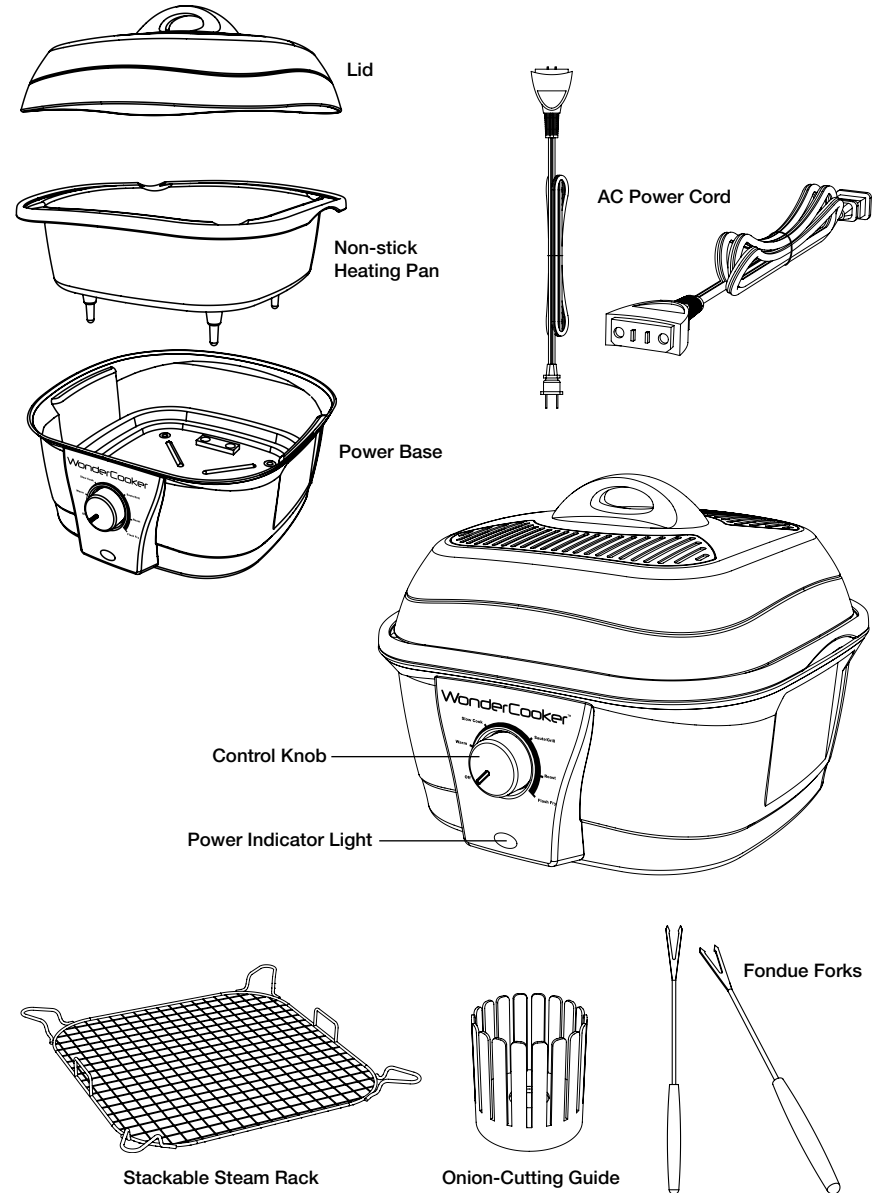

GETTING STARTED

Before use:

 - Remove the appliance from the packaging and unpack all the accessories.
- Take out the documents and the protective film
- Take out the power base
- Check that there is nothing (packing, paper etc.) stuck between the non-stick heating pan and the power base of the appliance.
- Clean the inside of the non-stick heating pan with a damp sponge and dishwashing detergent
- Attach non-stick heating pan to power base: Place the non-stick heating pan into the four holes in the metal plate at the base of the unit.

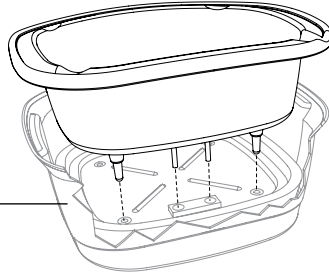


Before using your WonderCooker™ unit, clean the power base, stackable steam rack, fondue forks, lid and non-stick heating pan in warm, soapy water with a soft cloth and then rinse and dry thoroughly. **Never submerge the WonderCooker™ unit power base in water—to do so could permanently damage your WonderCooker™ unit and may cause personal injury or death.**

Control Settings

Control knob cycles through adjustable temperatures/functions such as OFF, WARM, SLOW COOK (STEAM), SAUTÉ/GRILL, ROAST, FLASH FRY

 The temperature can be set anywhere between the lowest settings at 140° F and the highest setting for Flash Fry at 375° F.

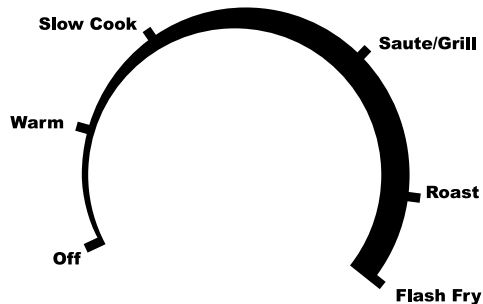

COOKING WITH YOUR WONDERCOOKER™ UNIT

• DO NOT USE AS A DEEP FAT FRYER

- During cooking, the indicator light goes on and off. It only stays lit when the appliance is heating to reach or maintain the correct temperature.
- Always remember to turn off the appliance when finished.

Warm

 
- Place the desired liquid or food directly into the non-stick heating pan and close the lid.
- Turn the knob to **Warm** setting. The indicator light will go on.

Slow Cook

- Place the desired liquid or food (depending on recipe instructions) directly into the non-stick heating pan and close the lid.
- Turn the knob to **Slow Cook** setting. The indicator light will go on.
- To retain heat and moisture during cooking, it is best not to lift the lid. Always make sure there is sufficient liquid to cover the food.
- Always turn your WonderCooker™ unit to “OFF” and unplug when no longer in use.
- See recipe book for more in-depth slow cooking instructions and delicious menu tips.

Steam

- Use the stackable steam rack for steaming.
- Place the stackable steam rack on the non-stick heating pan.
- Add 2 cups of water (keep the water level below the rack) and close the lid.
- Turn the knob to **Slow Cook** setting. The indicator light will go on.
- To retain heat and moisture during cooking, it is best not to lift the lid.
- When steaming is complete, carefully remove the hot stackable steam rack.
- Always turn your WonderCooker™ unit to “OFF” and unplug when no longer in use.
- See recipe book for more in-depth **Slow Cook (Steam)** instructions and delicious menu tips.

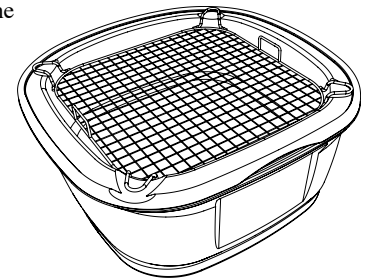


Sauté/Grill

- Turn the knob to **Sauté/Grill** setting. The indicator light will go on.
- Add a small amount of cooking oil, butter or margarine to the non-stick heating pan.
- When Sautéing or Grilling is complete, remove the food.
- Always turn your WonderCooker™ unit to “**OFF**” and unplug when no longer in use.
- See recipe book for more in-depth **Sauté/Grill** instructions and delicious menu tips.


Roast

 - Place the desired food (depending on recipe instructions) into the non-stick heating pan.
- Turn the knob to **Roast** setting. The indicator light will go on.
- When finished roasting, check food to see if it is cooked through.
- Always turn your WonderCooker™ unit to “**OFF**” and unplug when no longer in use.
- See recipe book for more in-depth **Roast** instructions and delicious menu tips.

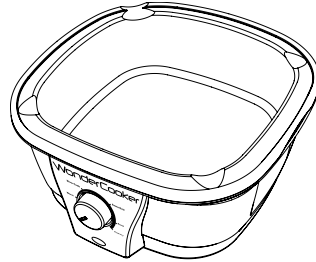

Flash Fry

 - Pour oil into the non-stick heating pan up to the fill-line (1 inch); NEVER go over the fill-in.
- Turn the knob to **Flash Fry** setting. The indicator light will go on.
- Place food in basket (if purchased) and lower into the oil. Fill the basket no more than indicated fill-line in the basket.
- Place food on dry paper towel.
- Always turn your WonderCooker™ unit to “**OFF**” and unplug when no longer in use.
- See recipe book for more in-depth **Flash Fry** instructions and delicious menu tips.

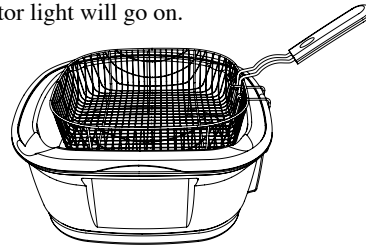

CLEANING AND MAINTENANCE

NEVER SUBMERGE THE POWER BASE IN WATER OR OTHER LIQUID, OR PLACE IN A DISHWASHER. THE LID AND NON-STICK HEATING PAN ARE DISHWASHER SAFE.

Always allow your WonderCooker™ unit to cool before cleaning.

To clean:

- Disconnect the power supply
- Lift lid and remove any cooking accessories. Wash the accessories with soapy water.
- Always remove hot oil from non-stick heating pan before washing.
- Remove non-stick heating pan, empty remaining food and liquid, and allow to cool. Fill the non-stick heating pan with warm water and a mild detergent. Use nonabrasive material to clean.
- The outer unit can be cleaned with a damp sponge. Never use abrasive or scouring pads.

Maintenance:

- Please make sure that the non-stick heating pan is thoroughly dry before using it.
- Never pour cold water into warm non-stick heating pan.
- Do not use abrasive or steel wool this may damage the non-stick surface.
- Only use wooden or heat proof plastic utensils to prevent damage to the non-stick heating pan's surface.
- Never use metal utensils.
- Never immerse the outer unit in water or other liquid. Wipe clean with a damp cloth.
- Never add water to hot oil.

HOW TO ORDER MORE WONDERCOOKER™ PRODUCTS

To make the most of your WonderCooker™ unit, additional accessories are available on the Web site. Visit www.wondercooker.com or call 1-800-549-9845.



The basket and handle work great for Flash Frying.

TROUBLE SHOOTING

PROBLEM	SOLUTION
The power indicator light is not on.	Be sure non-stick heating pan is securely inserted into power base. Make sure the magnetic plug is securely attached.
The temperature is too cool or too hot.	Please adjust as needed. Turn knob right toward Flash Fry setting for more heat or left toward Warm setting for less heat.

WARRANTY/CUSTOMER SERVICE

ONE YEAR LIMITED WARRANTY

This product is warranted to be free from defects in materials and workmanship for one year from the original purchase date. Should the product have a defect in materials or workmanship, we will repair or replace it without charge to you. A shipping and processing fee may apply. To obtain service under warranty, simply call our Customer Service Center toll-free at 1-800-549-9845.

This warranty does not cover any damage caused by accident, misuse or any use other than as intended and described in this owner's guide, or damage resulting from failure to maintain and clean this product as specified in this product manual. This warranty applies only to the original purchaser of the product.

Contact Info for Warranty Service:

P.O. Box 244
Hollywood, CA 90078
1-800-549-9845
www.wondercooker.com
© 2007 WonderCooker, LLC. All Rights Reserved.
Patents Pending.



ARBITRATION AGREEMENT

THIS ARBITRATION AGREEMENT ("AGREEMENT") AFFECTS YOUR LEGAL RIGHTS AND REMEDIES BY PROVIDING THAT DISPUTES BETWEEN YOU AND THE SELLER OF THIS PRODUCT ("COMPANY"), MUST BE RESOLVED THROUGH BINDING ARBITRATION, RATHER THAN IN A COURT. PLEASE READ THIS AGREEMENT CAREFULLY. YOU ACCEPT THE TERMS OF THIS AGREEMENT BY RETAINING THE PRODUCT(S) SHIPPED IN CONNECTION WITH THIS AGREEMENT (THE "PRODUCT") FOR MORE THAN FOURTEEN (14) DAYS AFTER RECEIPT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, YOU MAY RETURN THE PRODUCT TO COMPANY WITHIN FOURTEEN (14) DAYS OF RECEIPT AT NO COST TO YOU.

- 1. RESOLUTION OF CLAIMS OR DISPUTES.** Any claim or dispute between you and Company (or any of Company's subsidiaries or affiliates) arising out of or relating in any way to the Product or this Agreement shall be resolved through final, binding arbitration. This arbitration obligation applies regardless of whether the claim or dispute involves a tort, fraud, misrepresentation, product liability, negligence, violation of a statute, or any other legal theory. Both you and Company specifically acknowledge and agree that you waive your right to bring a lawsuit based on such claims or disputes and to have such lawsuit resolved by a judge or jury.
- 2. LIMITATION OF LEGAL REMEDIES.** All arbitrations under this Agreement shall be conducted on an individual (and not a class-wide) basis, and an arbitrator shall have no authority to award class-wide relief. You acknowledge and agree that this Agreement specifically prohibits you from commencing arbitration proceedings as a representative of others or joining in any arbitration proceedings brought by any other person.
- 3. ARBITRATION PROCEDURES.**
 - a. Before commencing any arbitration proceedings under this Agreement, you must first present the claim or dispute to Company by calling 818-217-2500 and asking for the Legal Department and allowing Company the opportunity to resolve the claim or dispute. If your claim or dispute is not resolved within sixty (60) days, you may commence arbitration proceedings in accordance with the terms of this Agreement.
 - b. The arbitration of any claim or dispute under this Agreement shall be conducted pursuant to the American Arbitration Association's ("AAA") United States Commercial Dispute Resolution Procedures and Supplementary Procedures for Consumer-Related Disputes. These rules and procedures are available by calling the AAA or by visiting its web site at www.adr.org.
 - c. The arbitration of any claim or dispute under this Agreement shall be conducted in the State of California or the location in which you received this Agreement.
 - d. All administrative expenses of arbitration proceedings commenced under this Agreement shall be divided equally between you and Company, except that: (a) if the claim or dispute that is the subject of the arbitration proceedings is less than ten thousand dollars (US\$10,000), you will be responsible for no more than one hundred twenty-five dollars (US\$125) in administrative expenses; (b) if the claim or dispute that is the subject of the arbitration proceedings is more than ten thousand dollars (US\$10,000) but less than seventy-five thousand dollars (US\$75,000), you will be responsible for no more than three hundred seventy-five dollars (US\$375) in administrative expenses; and (c) if the claim or dispute that is the subject of the arbitration proceedings is more than seventy-five thousand dollars (US\$75,000), then you will be responsible for administrative expenses in accordance with the Commercial Fee Schedule provided by the AAA. You acknowledge and agree that each party shall pay the fees and costs of its own counsel, experts and witnesses.
- 4. CHOICE OF LAW.** This Agreement shall be governed by the United States Federal Arbitration Act and the laws of the state of California.
- 5. SEVERABILITY.** If any provision of this Agreement is declared or found to be unlawful, unenforceable or void, such provision will be ineffective only to the extent that it is found unlawful, unenforceable or void, and the remainder of the provision and all other provisions shall remain fully enforceable.

